



Dishwasher User's Manual

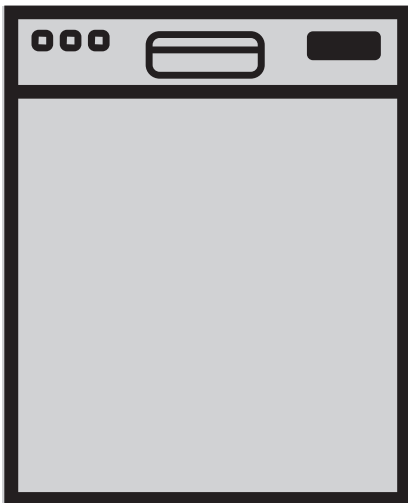

Dishwasher Instructions

Control Panel



1	ON/OFF BUTTON Press this button to switch the dishwasher on/off.
2	SELECTED PROGRAM INDICATOR LIGHTS This light indicates the program selected and the occurrence of a fault (Troubleshooting).
3	PROGRAM SELECTION BUTTON ↳ + ADJUSTING THE WATER SOFTENING SYSTEM Used to select the wash program required and adjust the water softening system.
4	WATER HARDNESS ADJUSTMENT ON INDICATOR LIGHT The light flashes to indicate that the appliance is in “water hardness adjustment” mode. SALT WARNING LIGHT This light  Indicates the salt is finished.
5	RINSE AID WARNING LIGHT This light indicates the rinse aid is finished.
6	OPTIONS and DISPLAY (on some models only)

To switch the dishwasher on & set the program:

1. Add the detergent tablet into the compartment inside the dishwasher door
2. Press the ON/OFF button (1); the Program Indicator light (2) will come on
3. Keep pressing the PROGRAM SELECTION button (3) until the indicator light for the required program lights up
4. Select the required option
5. Close the door and the program will start shortly afterwards

Cancelling a program in progress:

1. Open the door and hold down the PROGRAM SELECTION (3) button for a few seconds until the indicator lights for programs 4 and 5 illuminate simultaneously (marked "end")
2. Close the door
3. After approximately 1 minute the dishwasher will advance to the end of the cycle

To change the program:

Open the door & select a new program. When the door is closed, the dishwasher will automatically select the new program.