



Microwave Oven

User manual

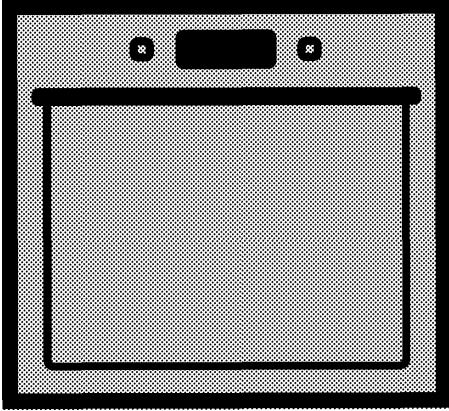

MP422X Microwave Combination Oven

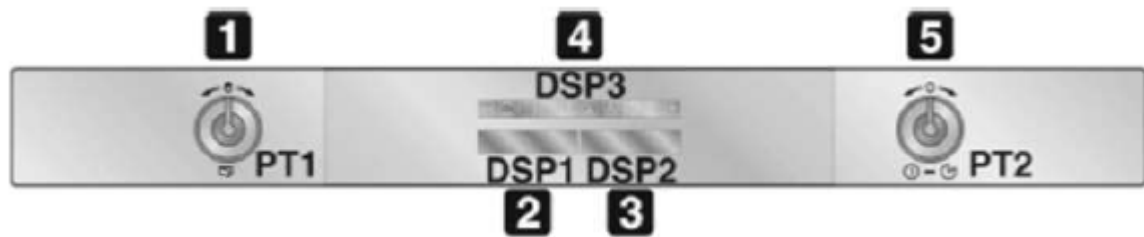

1. Functions Parameters Knob (PT1)
This knob allows you to:
 - Open the door
 - Set the time
 - Select the cooking temperature
 - Select the cooking duration
 - Program the cooking start and end times
2. Current time/duration display (DSP1) – shows the current time or the cooking duration
3. Microwave Power/Weight Display (DSP2)– shows the parameters set for the function required, or the parameters set by the user
4. Function Display (DSP3)– shows all the cooking functions available for selection
5. Function Switch-On knob (PT2) – allows the switching on/off of the microwave and to select the cooking function

To open the door press the PT1 button briefly

To Set the time - the time must be set for the oven to work

1. Press PT1 for 3 seconds
2. Turn PT1 to increase/decrease the hours
3. Press PT1 again to move onto setting the minutes
4. Press PT1 again to confirm the time

Cooking Functions

Selecting the function:

Press PT2 once – all of the displays and knobs will light up

Turn PT2 to the right or left

The function selected will change colour to orange on DSP3

The preset cooking time will be displayed on DSP1 and the preset parameters are displayed in alternation on DSP2

Microwave



1. Select this function using PT2
2. Turn PT1 for 3 seconds to confirm and the microwaves power light will blink

3. Turn PT1 to the right/left to adjust power level
4. Press PT2 to start cooking, or press PT1 for 3 seconds to change the cooking time

Microwave + Grill



1. Select this function using PT2. After selecting, turn PT1 to the right or left to change the preset cooking duration
2. Turn PT1 for 3 seconds to confirm and the microwaves power light will blink
3. Turn PT1 to the right/left to adjust power level
4. Press PT2 to start cooking, or press PT1 for 3 seconds to change the cooking time

Grill



1. Select this function using PT2. After selecting, turn PT1 to the right or left to change the preset cooking duration
2. Press PT2 to start cooking, or press PT1 for 3 seconds to change the cooking time

Defrosting by time (manual)



1. Select this function using PT2. After selecting, turn PT1 to the right or left to change the preset cooking duration
2. Press PT2 to start cooking, or press PT1 for 3 seconds to change the cooking time
3. Microwave power will be automatically varied to achieve best thawing results

Pizza function



1. Turn PT2 to the right or left to select the pizza function.
2. The pizza function indicator will be highlighted and DSP2 shows the pre-set time of 7 minutes.
3. This pre-set time is indicated to cook handmade pizzas and frozen pizzas up to 26cm diameter, weighing approx. 350g. Frozen pizzas should be allowed to thaw and reach at least 5°C.

To cancel a cooking cycle:

Press PT2 for 3 seconds

You will then hear a beep and the oven returns to the OFF setting