

Microwave Oven (with handle) - User Manual

General Notes

Please do not use metal products in the Microwave-Oven. With the exception of the Fan Oven & Grill settings only

To open the oven during cooking either open the door or press the stop button. To restart, press the start button.

To stop cooking, turn function dial to 0

Please only use microwave suitable glass/plates

Fahrenheit to Celsius

140°C = 275°F

150°C = 300°F

170°C = 325°F

180°C = 350°F



Start



Stop

Instructions

Microwave = 4 waved lines (2 o'clock)

- 1) Press OK
- 2) Select Time with + & -
- 3) Press OK
- 4) Select Power Level with + & -
- 5) Press OK
- 6) Press Start

Grill = black dotted line (3 o'clock)

- 1) Select Time with + & -

- 2) Press OK
- 3) Press Start

Microwave & Grill = Waved lines with black line (5 o'clock)

- 1) Select Time with + -
- 2) Press OK
- 3) Select Power Level with + -
- 4) Press OK
- 5) Press Start

Fan Oven = Fan in Circle (7 o'clock)

- 1) Select Time with + -
- 2) Press OK
- 3) Turn the Thermostat to your desired temperature
- 4) Press start

Microwave & Oven = Fan Oven with 3 waved lines (9 o'clock)

- 1) Select Time with + -
- 2) Press OK
- 3) Select Power Level with + -
- 4) Press OK
- 5) Select the Oven temperature using the Thermostat (dial on the right)
- 6) Press Start

Grill + Fan = Black line with fan (11 o'clock)

- 1) Select Time with + -
- 2) Press OK
- 3) Press Start

Defrosting (automatic) - microwave function

- 1) Select Microwave function
- 2) Select + once. Auto* will then display
- 3) Press OK
- 4) Using the + - select the defrost level that is appropriate for your food
 - F01 - Meat
 - F02 - Poultry
 - F03 - Fish
 - F04 - Fruit
 - F05 - Bread

- 5) Press OK
- 6) Using the + - select the amount of grams (g) appropriate for your food (check packaging)
- 7) Press OK
- 8) Press Start

(manual)

- 1) Select Microwave function
- 2) Press OK
- 3) Select Time with + -
- 4) Press OK
- 5) Select Power Level with + - (defrosting should be done on a lower power if possible)
- 6) Press OK
- 7) Press Start

Please contact the front desk if you are having any issues.