



Microwave Instructions

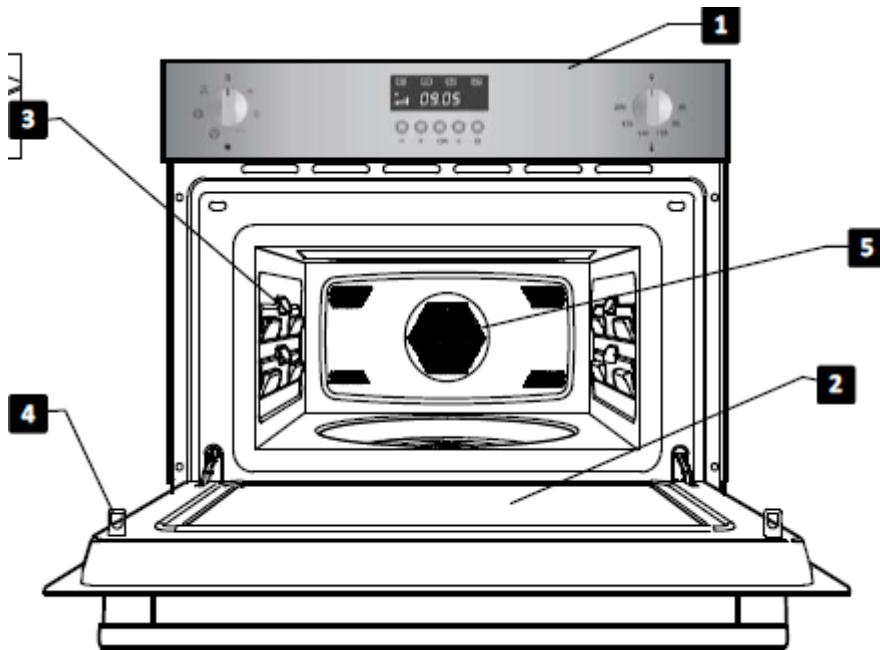

1. Control Panel
2. Door Window Glass
3. Lateral Supports
4. Catches
5. Hot air output

Control Panel

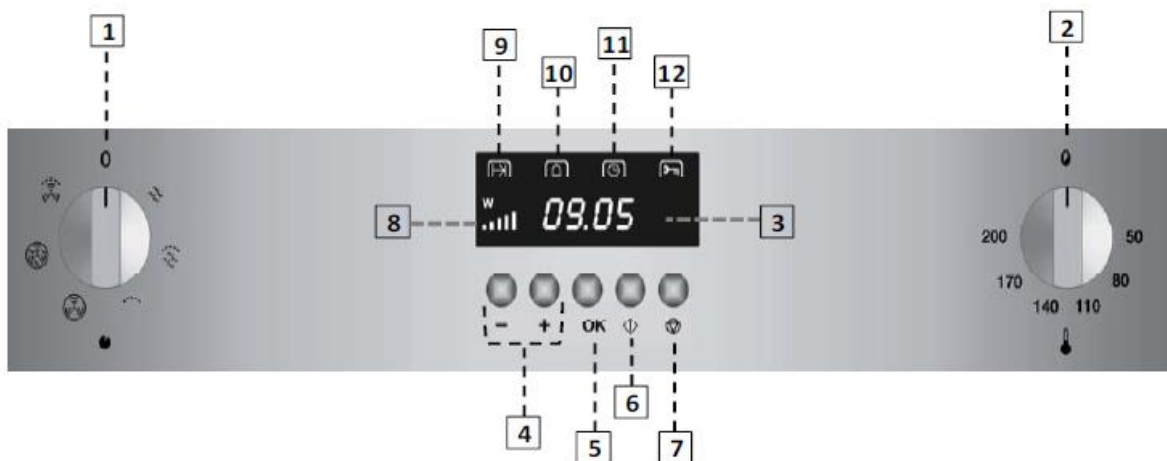

1. Function Selector Knob
2. Thermostat
3. Display
4. + and - Keys
5. OK Key
6. Start Key
7. Stop Key
8. Power level indicator light
9. Operating time indicator light
10. Timer indicator light
11. Clock indicator light
12. Child lock indicator light

Child lock function

1. To block the oven, press the STOP key (7) for 3 seconds. You will then see a KEY symbol in the top right hand corner of the screen
2. To unblock the oven press the STOP key (7) for 3 seconds again.

Timer

1. Press the '+' key (4) until the TIMER indicator flashes
2. Press the OK key (5)
3. The numbers flash . Press the '+' (4) and the '-' (3) keys to set the desired time
4. Press the OK key (5). The timer will countdown to zero and at the end of the set time the oven will sound 3 beeps every 30 seconds until the OK key is pressed
5. To cancel the active time function repeat the above steps but setting the time to zero

Basic Functions

Microwaves

Use this function to cook and heat vegetables, potatoes, rice, fish and meat

1. Rotate the **Function Selector (1)** to the position corresponding to the Microwave Function



2. The **Operating Time Indicator Light** flashes.
3. Press the **OK key (5)**.
4. Using the "+" (4) and "-" (3) keys set the desired operating time.
5. Press the **OK key (5)**.

6. The **Power Level Indicator Light** will start to flash.

7. Using the "+" (4) and "-" (3) keys set the required microwave power level.
8. Press the **OK key (5)**.
- 9 Press the **Start key (6)**. The oven will start to operate.

Grill

Use this function to brown the top of food quickly

1. Rotate the **Function Selector (1)** to the position corresponding to the Grill Function.



2. The **Operating Time Indicator Light** and the **Display** start to flash.

3. With the "+" (4) and "-" (3) keys set the desired operating time.

4. Press the **OK key (5)**.
5. Press the **Start key (6)**. The oven will start to operate.

Microwave + Grill

Use this function to cook lasagne, poultry, roast potatoes and toasted foods

1. Rotate the **Function Selector (1)** to the position corresponding to the Microwave + Grill



Function.

2. The **Operating Time Indicator Light** will flash and the **Power Level Indicator Light** will be on. The operating time will flash in the display.
3. With the **“+” (4)** and **“-” (3)** keys set the desired operating time.

4. Press the **OK key (5)**.

5. The **Power Level Indicator Light** will flash.

6. Using the **“+” (4)** and **“-” (3)** keys select the required microwave power level.

7. Press the **OK key (5)**.

8. Press the **Start key (6)**. The oven will start to operate.

Hot Air

Use this function to bake food

- 1 Rotate the **Function Selector (1)** to the position corresponding to the Hot-Air Function.



2. The **Operating Time Indicator Light** and the **Display** start to flash.

3. With the **“+” (4)** and **“-” (3)** keys set the desired operating time.

4. Press the **OK key (5)**.

5. Select the desired oven temperature using the **Thermostat control (2)**.

6. Press the **Start key (6)**. The oven will start to operate.

Microwaves + Hot-Air

Use this function to rapidly bake foods

1. Rotate the **Function Selector (1)** to the position corresponding to the Microwave + Hot-



Air Function.

2. The **Operating Time Indicator Light** will flash and the **Power Level Indicator Light** will be on. The operating time will flash in the display.

3. With the **“+” (4)** and **“-” (3)** keys set the desired operating time.

4. Press the **OK key (5)**.

5. The **Power Level Indicator Light** will flash.

6. With the **“+” (4)** and **“-” (3)** keys set the desired microwave power level.

7. Press the **OK key (5)**.

8. Select the desired oven temperature using the **Thermostat control (2)**.

9. Press the **Start key (6)**. The oven will start to operate.

Grill + Fan

Use this function to bake evenly food and at the same time brown their surface

1. Rotate the **Function Selector (1)** to the position corresponding to the Grill + Fan



Function.

2. The **Operating Time Indicator Light** and the **Display** start to flash.

3. With the **“+” (4)** and **“-” (3)** keys set the desired operating time.

4. Press the **OK key (5)**.

5. Press the **Start key (6)**. The oven will start to operate.

Defrosting by time

Use this function to defrost any type of food quickly

1. Rotate the **Function Selector (1)** to the position corresponding to the Microwave Function



2. The **Operating Time Indicator Light** flashes.

3. Press the **OK key (5)**.

4. Using the **“+” (4)** and **“-” (3)** keys set the desired operating time.

5. Press the **OK key (5)**.

6. The **Power Level Indicator Light** will start to flash.

7. Using the **“+” (4)** and **“-” (3)** keys set the required microwave power level.

8. Press the **OK key (5)**.

9 Press the **Start key (6)**. The oven will start to operate.

Interrupting a cooking cycle

You can stop the cooking process at any time by pressing the STOP key once or by opening the oven door.

- The grill is deactivated but will still be HOT – Danger of burning

To restart the process, close the door and press the START key.

Cancelling a cooking cycle

If you wish to cancel the cooking process, rotate the Function Selector until zero or press the STOP key twice.