


## MWD1755 Montpellier Washer Dryer

### Control Panel

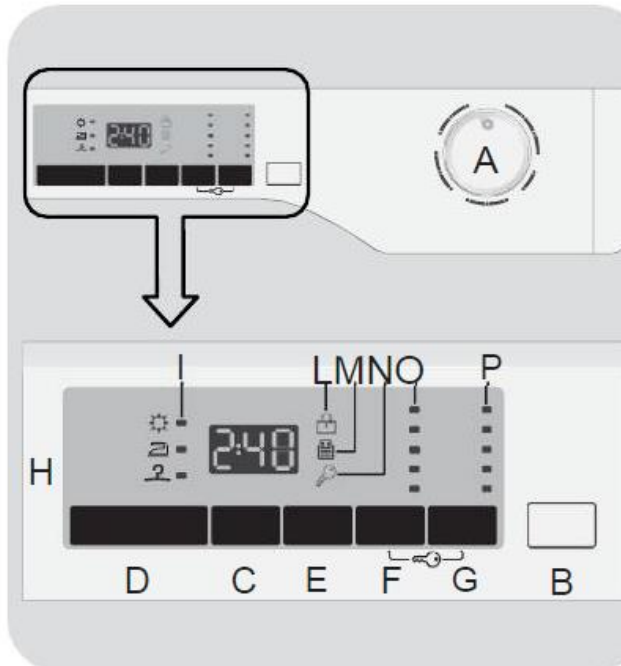

A Programme selector with OFF position

B Start/Pause button

C Delay Start button

D Drying Selection button

E Rapid/Stain level button

F Temperature selection button

G Spin speed button

F+G Key lock

H Digital display

I Drying selection indicator lights

L Door locked indicator light

M KG Load indicator light

N Key lock indicator light

O Temperature selection indicator lights

P Spin speed indicator lights

Child Lock – Press the Temperature Selection and Spin Speed buttons simultaneously for 3 seconds and the machine will lock to avoid unwanted changes during the cycle.

### **To use the washing machine:**

1. Add detergent and fabric softener as required
2. Turn on the machine and select the required programme.
3. Adjust the washing temperature if necessary and press the required "option" buttons
4. Press the start/pause button
5. At the end of the programme the machine will automatically stop and "End" will be displayed on the control panel

### **To pause a programme:**

Press and hold the start/pause button. An indicator light and the time remaining indicator will flash, showing the machine has been paused.

To resume the programme again, press the start/pause button again.

The washer dryer has several built in programmes, however you may wish to adjust the temperature, spin speed or drying level.

### **To adjust the temperature:**

If you wish to change the default water temperature, press the Temperature Selection button until the desired temperature is displayed.

### **To adjust the spin speed:**

Press the spin speed button, if you wish you can cancel the spin cycle. To reactivate the spin cycle press the button until you reach the spin speed you would like to set. It is possible to modify the spin speed without pausing the machine.

The machine will automatically override a speed that is unsuitable for the selected programme.

### **Drying Selection:**

If you would like to dry your laundry automatically after washing, select the programme required using the Drying Selection button. Or you can finish the wash and then select the drying programme and load size.

If you want to select a drying only cycle turn the dial to the desired drying programme and select the degree of dryness you request.

### **To cancel a selected programme:**

Press the button repeatedly until the lights go off or reposition the programme selector to the OFF position.