



# Smeg Hob

## Users Manual

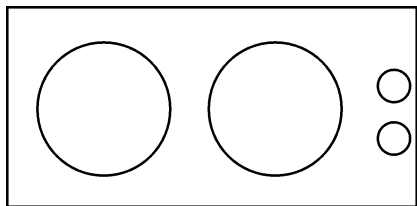

## 2.2 Control Panel

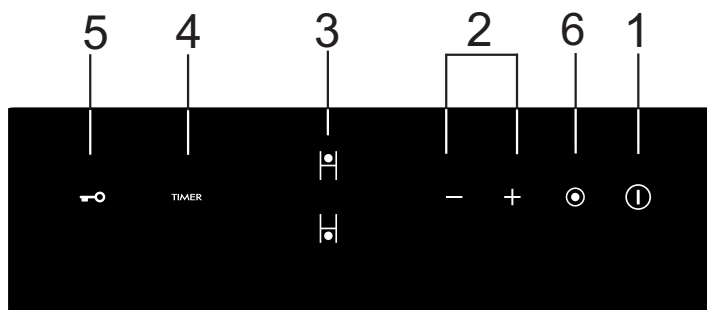


1. ON/OFF control
2. Power / Timer regulating controls
3. Heating zone selection controls
4. Timer control
5. Keylock control
6. Double zone control

## 3. Operation of Product

### 3.1 Touch Controls

- The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object (e.g. a utensil or a cloth) covering them. Even a thin film of water may make the controls difficult to operate.

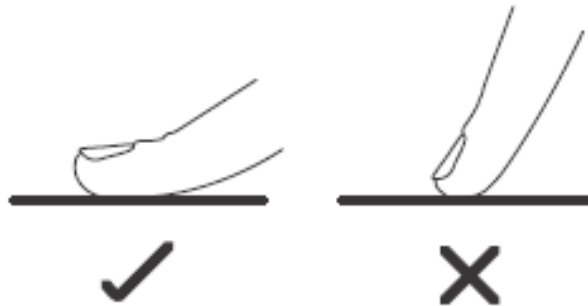


### 3.2 Choosing the right Cookware


Do not use cookware with jagged edges or a curved base.



Make sure that the base of your pan is smooth, sits flat against the glass, and is the same size as the cooking zone. Always centre your pan on the cooking zone. Always lift pans off the ceramic hob – do not slide, or they may scratch the glass.

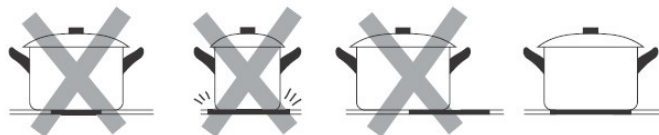





Always lift pans off the ceramic hob – do not slide, or they may scratch the glass.

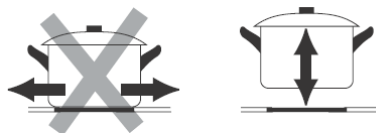


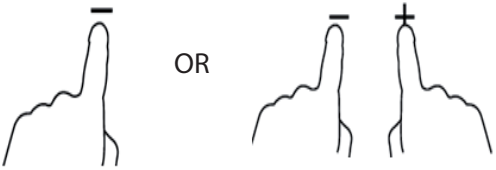

### 3.3 How to use

#### 3.3.1 Start cooking

After power on, the buzzer beeps once, all the indicators light up for 1 second then go out, indicating that the ceramic hob has entered the state of standby mode.
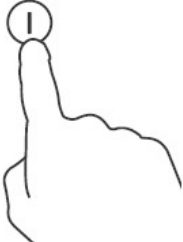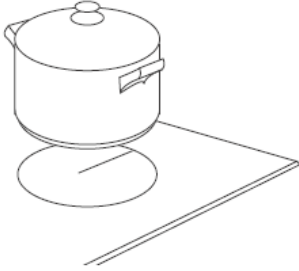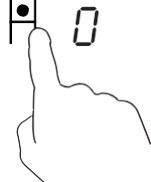
<p>Touch the ON/OFF control. all the indicators show “-”.</p>	
<p>Place a suitable pan on the cooking zone that you wish to use.</p> <ul style="list-style-type: none"> <li>• Make sure the bottom of the pan and the surface of the cooking zone are clean and dry.</li> </ul>	
<p>Touching the heating zone selection control.</p>	
<p>Select a heat setting by touching the “-” or “+” control.</p> <ul style="list-style-type: none"> <li>• If you don't choose a heat setting within 1 minute, the ceramic hob will automatically switch off. You will need to start again at step 1.</li> <li>• You can modify the heat setting at any time during cooking.</li> <li>• By holding down either of these buttons, the value will adjust up or down.</li> </ul>	

### 3.3.2 Finish cooking

Touching the heating zone selection control that you wish to switch off.	
Turn the cooking zone off by scrolling down to "0" or touching "-" and "+" control together.	
Turn the whole cooktop off by touching the ON/OFF control.	


#### **Beware of hot surfaces**







"H" will show which cooking zone is hot to touch. It will disappear when the surface has cooled down to a safe temperature. It can also be used as an energy saving function if you want to heat further pans, use the hotplate that is still hot.

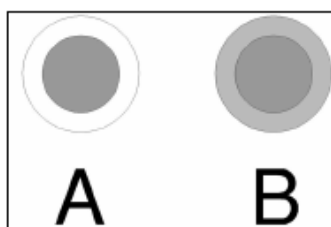

### 3.3.3 Using the Double zone function

- The function only work in 2# cooking zone
- The Double cooking zone has two cooking areas that you can use a central section and an outer section. You can use the central section (A) independently or both sections (B)



<b>Activate the Double zone</b>	
Adjust the heating setting between power levels 1 and 9 (e.g. 6).	
Central section of the Double cooking zone will switch on.	
Touching the Double zone control "⊙" once time, the section <b>(B)</b> works.	
The cooking zone indicator show "H -" and "H 6" alternately.	
<b>Deactivate the Double zone</b>	
Touching dual zone control "⊙" again, the dual zone function is deactivated.	
The cooking zone indicator show "6".	

**Note:**

- 1 The double loop is available only in 2# cooking zone.
- 2 You can select the function from level 1 to level 9.
- 3 You can active the Dual zone only when the 2# cooking zone is selected.

### 3.3.4 Locking the Controls

- You can lock the controls to prevent unintended use (for example children accidentally turning the cooking zones on).
- When the controls are locked, all the controls except the ON/OFF control are disabled.

<b>To lock the controls</b>	
Touch the lock control	The timer indicator will show " Lo "
<b>To unlock the controls</b>	
Make sure the ceramic hob is turned on Touch and hold the lock control for a while.	



When the hob is in the lock mode, all the controls are disable except the ON/OFF ①, you can always turn the ceramic hob off with the ON/OFF ① control in an emergency, but you shall unlock the hob first in the next operation.


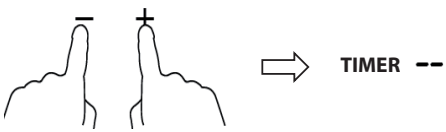
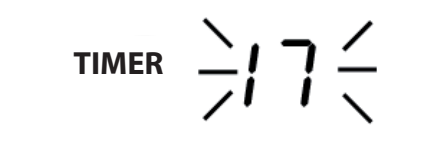
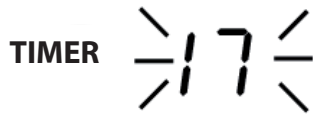

### 3.3.5 Timer control

You can use the timer in two different ways:

- You can use it as a minute minder. In this case, the timer will not turn any cooking zone off when the set time is up.
- You can set it to turn one or more cooking zones off after the set time is up.
  - The timer of maximum is 99 minutes

#### a) Using the Timer as a Minute Minder






 
##### If you are not selecting any cooking zone

<p>Make sure the cooktop is turned on. Note: you can use the minute minder even if you're not selecting any cooking zone.</p>	
<p>Touch the timer control, the timer indicator will flash ; Adjust the timer setting by touch the "-" or "+" controls. The minute minder indicator will start flashing and will show in the timer display.</p>	
<p>Touching the "-" and "+" together, the timer is cancelled, and the "--" will show in the minute display.</p>	
<p>When the time is set, it will begin to count down immediately. The display will show the remaining time and the timer indicator will flash for 5 seconds.</p>	
<p>Buzzer will beep for 30 seconds and the timer indicator shows "--" when the setting time finished.</p>	

Hint:

- Touch the "-" or "+" control of the timer once to decrease or increase by 1 minute.
- Touch and hold the "-" or "+" control of the timer to decrease or increase by 10 minutes.
- If the setting time exceeds 99 minutes, the timer will automatically return to 0 minute.

## b) Setting the timer to turn one or more cooking zones off

<b>Set one zone</b>	
Touch the zone you want to set.	
Touch the timer control, the timer indicator show "10".	
Set the time by touching the "-" or "+" control of the timer.	
Touching the "-" and "+" together, the timer is cancelled, and the will show "--" in the minute display.	
When the time is set, it will begin to count down immediately. The display will show the remaining time and the timer indicator flash for 5 seconds.	
When cooking timer expires, the corresponding cooking zone will be switched off automatically. The display will show "H" which means hot.	

### Note:

- a) The red dot next to power level indicator will illuminate indicating that zone is selected.



- b) If you want to change the time after the timer is set, you have to start from step 1.  
 c) The method for setting two zones is the same as mentioned above.

## Setting the timer to turn more than one cooking zones off

- a) If more than one heating zones use this function, the timer indicator will show the lowest time.  
 (e.g. zone 1# setting time of 5 minutes, zone 2# setting time of 15 minutes, the timer indicator shows "5".)  
 NOTE: The red dot next to power level indicator will flash.





(set to 5 minutes)



(set to 15 minutes)

### TIMER

- 05 +

- b) Once the countdown timer expires, the corresponding zone will switch off. Then it will show the new min. timer and the dot of corresponding zone will flash.



zone 1#



zone 2#

### TIMER

- 10 +

- c) When cooking timer expires, the corresponding cooking zone will be switch off automatically.



Note:

- 1) The red dot next to power level indicator will illuminate indicating that zone is selected.



- 2) If you want to change the time after the timer is set, you have to start from step 1.

### 3.3.6 Over-Temperature Protection

A temperature sensor equipped can monitor the temperature inside the ceramic hob. When an excessive temperature is monitored, the ceramic hob will stop operation automatically.

### 3.3.7 Residual Heat Warning

When the hob has been operating for some time, there will be some residual heat. The letter " H " appears to warn you to keep away from it.

### 3.3.8 Default working times

Another safety feature of the hob is automatic shutdown. This occurs whenever you forget to switch off a cooking zone. The default shutdown times are shown in the table below:

Power level	1	2	3	4	5	6	7	8	9
Default working timer (hour)	8	8	8	4	4	4	2	2	2