


Hob

User's Manual

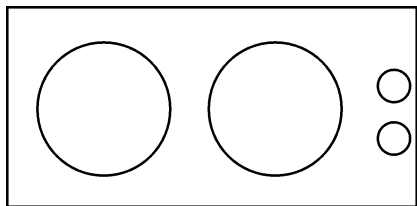

Hob Instructions

ON/OFF key

Turns the hob on or off.

Control lock button

Activates or deactivates the control lock if pressed for 3 seconds.

Increase key

Increases the power level or cooking time.

Decrease key

Reduces the power level or cooking time.


Timer key



Activates the timer for the automatic shut-down.

Switching on the cooking hob

To switch on the hob, hold down the ON/OFF key for at least 3 seconds





If no function is activated within 30 seconds of switching on, the hob switches off automatically

After switching use the + keys to activate the required cooking zone. The display shows the symbol 

Press the + key again. The display shows the symbol  or  to indicate that the cooking zone is on at the maximum power

Press the Increase + and decrease – key to increase or decrease the required power level.



If the **Increase** key  is pressed when the cooking zone is at the maximum power  or  (depending on the model), the cooking zone deactivates .