


# **Microwave**


## **User's Manual**

## Microwave Instructions

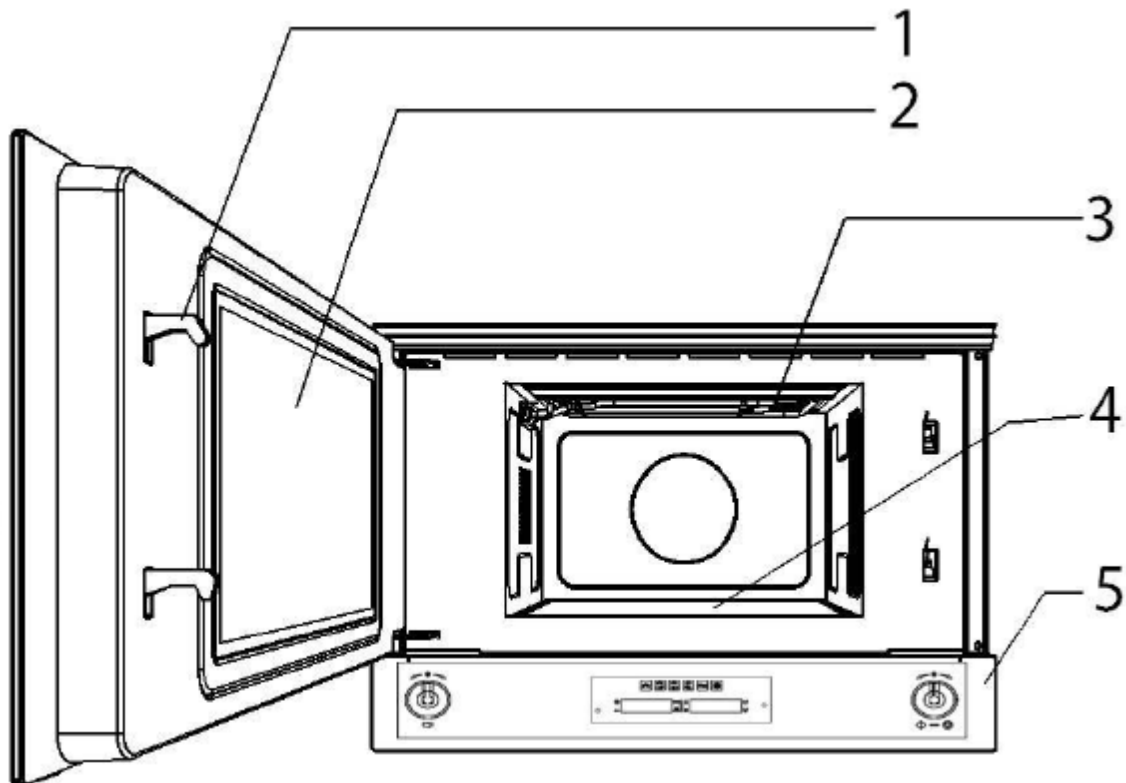

1. Catches
2. Door window glass
3. Drop-down grill
4. Ceramic base
5. Control Panel

## Control Panel

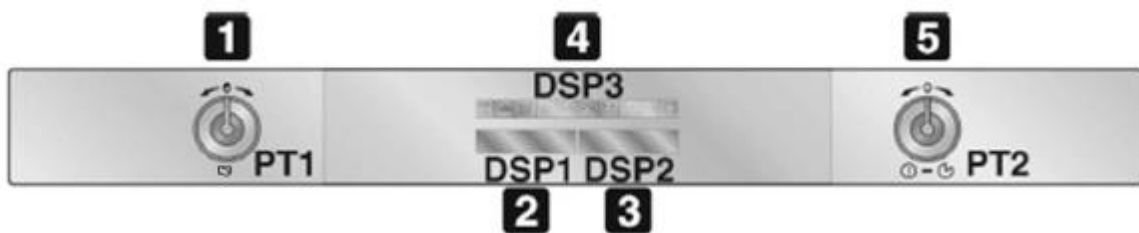

1. Function's Parameters knob – allows you to do a number of functions:
  - Open the door
  - Set the time
  - Select the cooking temperature
  - Select the cooking duration
  - Program the cooking start and end times
2. Shows the current time or the cooking duration

3. Microwave power/weight display – shows the detail of what has been set by the program or user
4. Function Display – Shows all the cooking functions available for selection
5. Function Switch on knob – to switch the microwave on and off

Functions available



**Microwaves**



**Defrost by time**



**Microwaves + grill element**



**Defrost by weight**



**Grill element**



**Pizza function**

To open the microwave door – press the Function's Parameters knob (shown in the diagram as PT1) briefly

To select a function:

- Press PT2 once. Select a cooking function by turning PT2 to the right or left
- DSP3 will then change to orange
- The preset cooking time will be displayed on DSP1 and the preset parameters are displayed in DSP2

## Microwave



Given that they penetrate directly into the food, microwaves allow cooking to take place in a very short period of time and with a considerable saving of energy. They are suitable for cooking without fat and also for defrosting and re-heating food while maintaining its original appearance and fragrance.

1. After selecting this function, turn PT1 to the right or left to change the preset cooking duration.
2. Press PT1 for 3 seconds to validate and the microwaves power light **W** starts to blink.
3. Turn PT1 to the right or left to change the preset microwaves power.
4. Press PT2 to immediately start the cooking process or otherwise press PT1 for 3 seconds to set a different time for the cooking process start (please refer to “Delayed Start Time (Automatic cooking)”).



If the door is opened then cooking will stop. Once the door is closed press the **START** key to resume cooking.

## Microwave + Grill



The use of the grill results in perfect browning of the food's surface. Using the microwave on the other hand leads to a rapid internal cooking of the food.

1. After selecting this function, turn PT1 to the right or left to change the preset cooking duration.
2. Press PT1 for 3 seconds to validate and the microwaves power light **W** starts to blink.
3. Turn PT1 to the right or left to change the preset microwaves power.
4. Press PT2 to immediately start the cooking process or otherwise press PT1 for 3 seconds to set a different time for the cooking process start (please refer to "Delayed Start Time (Automatic cooking)").



### Improper user

### Risk of damages to the appliance

- Do not use the combined functions to heat or boil liquids.

For further functionality just ask at the Front Desk for a detailed instruction manual