


Smeg

Microwave Oven

User manual

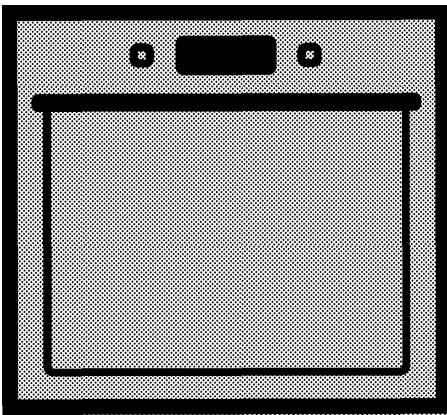


Operation Instructions

Clock Setting

When the microwave oven is electrified, the screen will display "0:00", buzzer will ring once.

1) Press "  " twice to select clock function, the hour figures will flash.


2) Turn "  " to adjust the hour figures, the input time should be within 0--23.

3) Press "  ", the minute figures will flash.

4) Turn "  " to adjust the minute figures, the input time should be within 0--59.

5) Press "  " to finish clock setting. ":" will flash, and the time will light.

Note: 1) If the clock is not set, it would not function when powered.

2) During the process of clock setting, if you press "  ", the oven will go back to the previous status automatically.

Microwave Cooking

Press " **P** ", the LED will display "P100. Press

" **P** " for times or turn "  " to choose the power you want,

and "P100", "P80" "P50", "P30" or "P10" will display for each added press. Then

press" $\frac{\text{Start}}{+30 \text{ sec}}$ " to confirm, and turn "  " to set cooking time from


0:05to 95:00. Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " again to start cooking.

Example: If you want to use 80% microwave power to cook for 20 minutes, you can operate the oven as the following steps.

1) Press " **P** " once, the screen display "P100".

2) Press " **P** " once again or turn "  " to choose 80% microwave power.

3) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to confirm, and the screen displays "P 80".

4) Turn "  " to adjust the cooking time until the oven displays "20:00".

5) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to start cooking .

Note: the step quantities for the adjustment time of the coding switch are as follow:

0---1 min : 5 seconds

1---5 min : 10 seconds

5---10 min : 30 seconds

10---30 min : 1 minute



30---95 min : 5 minutes

" P " Pad instructions

Order	Display	Microwave Power	Grill Power
1	P100	100%	
2	P80	80%	
3	P50	50%	
4	P30	30%	
5	P10	10%	
6	G	0%	100%
7	C-1	55%	45%
8	C-2	36%	64%


Grill or Combi. Cooking

Press " P " once, "P100" displays and then press


" P " for times or turn the  to choose the power you want, and "G", "C-1" or "C-2" will display for each added press. Then press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to confirm, and turn " to set cooking time from 0:05 to 95:00. Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " again to start cooking.

Example: If you want to use 55% microwave power and 45% grill power(C-1) to cook for 10 minutes, you can operate the oven as the following steps.

- 1) Press " P " once, the screen display "P100".

- 2) Press " P " times or turn " to choose combi. 1 mode.

- 3) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to confirm, and the screen displays "C-1".


- 4) Turn " to adjust the cooking time until the oven displays "10:00".

- 5) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to start cooking .


Note: If half the grill time passes, the oven sounds twice, and this is normal.


In order to have a better effect of grilling food, you should turn the food over, close the door, and then if no operation the oven will continue cooking.

Quick Start

- 1) In waiting state, Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to start cooking with 100% power, each added press will increase 30 seconds cooking time up to 95 minutes.
- 2) In microwave, grill, combi. cooking or time defrost state, each press of " $\frac{\text{Start}}{+30 \text{ sec}}$ " can increase 30 seconds of cooking time.
- 3) In waiting state, turn "  " anti-clockwise to set cooking time with 100% microwave power, then press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to start cooking.


5. Defrost By Weight


- 1) Press "  " once, and the oven will display "dEF1".

- 2) Turn "  " to select the weight of food from 100 to 2000 g.

- 3) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to start defrosting.


6. Defrost By Time

- 1) Press "  " twice, and the oven will display "dEF2".

- 2) Turn "  " to select the defrost time.

- 3) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to start defrosting.

Auto Menu

- 1) Turn "  " right to choose the menu, and "A-1" to "A-8" will display, which means pizza, meat, vegetable, pasta, potato, fish, beverage and popcorn.

- 2) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to confirm.

- 3) Turn "  " to choose the default weight as the menu chart.

- 4) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to start cooking.

Example: If you want to use "Auto Menu" to cook fish for 350g.

- 1) Turn "  " clockwise till "A-6" displays.

- 2) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to confirm.



- 3) Turn "  " to select the weight of fish till "350" displays.

- 4) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to start cooking.

The menu chart:

Menu	Weight	Display
A-1 Pizza	200 g	200
	400 g	400
A-2 Meat	250 g	250
	350 g	350
	450 g	450
A-3 Vegetable	200 g	200
	300 g	300
	400 g	400
A-4 Pasta	50g(with 450 ml cold water)	50
	100g(with 800 ml cold water)	100
A-5 Potato	200 g	200
	400 g	400
	600 g	600
A-6 Fish	250 g	250
	350 g	350
	450 g	450
A-7 Beverage	1 cup(120 ml)	1
	2 cups(240 ml)	2
	3 cups(360ml)	3
A-8 Popcorn	50 g	50
	100 g	100

Kitchen Timer

- (1) Press " " once, the screen will display 00:00.
- (2) Turn " " to enter the correct time. (The maximum cooking time is 95 minutes.)
- (3) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to confirm setting.
- (4) When the kitchen time is reached, the buzzer will ring 5 times.


If the clock has been set (24-hour system), the screen will display the current time.


Note: The kitchen Time is different from 24-hour system. Kitchen Timer is a timer.

9. Multi-section cooking


At most 2 sections can be set for cooking. In multi-section cooking, if one section is defrosting, then defrosting shall be placed in the first section.

Example: If you want to defrost food for 5 minutes and then cook with 80% microwave power for 7 minutes, operate it as the following:


- 1) Press " " twice, and the oven will display "dEF2".

- 2) Turn " " to select the defrost time till "5:00" display.

- 3) Press "**P**" once, the screen display "P100".


- 4) Press "**P**" once again or turn " " to choose 80% microwave power.

- 5) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to confirm, and the screen displays "P 80".

- 6) Turn " " to adjust the cooking time till the oven displays "7:00".

- 7) Press " $\frac{\text{Start}}{+30 \text{ sec}}$ " to start cooking, and buzzer will sound once for the first section, defrosting time counts down; buzzer will sound once again entering the second cooking. when cooking finish, buzzer sounds five times.

. Inquiring Function

- (1) In states of microwave, grill and combination cooking, press " **P** ", the current power will be displayed for 3 seconds. After 3 seconds, the oven will turn back to the former state;
- (2) In cooking state, press "  " to inquire the time and the time will display for 3 seconds.

Lock-out Function for Children

Lock: In waiting state, press " $\frac{\text{Stop}}{\text{O}}$ " for 3 seconds, there will be a long beep denoting entering the children-lock state and the current time will display if the time has been set, otherwise, the LED will display " **---** ".

Lock quitting: In locked state, press " $\frac{\text{Stop}}{\text{O}}$ " for 3 seconds, there will be a long "beep" denoting that the lock is released.